

# SMS

To send invitations via SMS and receive system notifications on your mobile phone, enter the login credentials of your **Every8D.com** account.



The settings for this service are hidden unless you select 繁體中文 (Traditional Chinese) as the language for your web interface. To change the language, see [Applications > System Appearance](#).



**This service is available only in Taiwan.**

SMS Server Setup (For cellphones used in Taiwan only.)

Register <http://www.every8d.com>

Username

Password

System Notification

Phone Number

Send a Test SMS

| Field    | Description                                  |
|----------|--|
| Register | Link to the Every8D website.                 |
| Username | Enter the username for your Every8D account. |
| Password | Enter the password for your Every8D account. |

| Field                      | Description  |
|----------------------------|--|
| <b>System Notification</b> | Enable this option if you want to receive a message from the network drive when; <ul style="list-style-type: none"><li>• Hard disk is full (used over 95%).</li><li>• Hard disk temperature is high (over 75°C).</li><li>• Hard disk related errors.</li></ul> |
| <b>Phone Number</b>        | Enter the phone number where you want to receive the system notification.  |
| <b>Send a Test SMS</b>     | Click <b>Send</b> to send a test message to your mobile phone in order to confirm that the service works.  |

From:  
<http://wiki.myakitio.com/> - **MyAkitio Wiki**

Permanent link:  
[http://wiki.myakitio.com/preferences\\_sms](http://wiki.myakitio.com/preferences_sms)

Last update: **2012/12/21 12:48**

