## Email

To send e-mail invitations and receive system notifications in your mailbox, set up a SMTP server. If you are using a free e-mail account, check if it supports POP/SMTP to receive and send your mails. If not, ask your internet provider for an account that you can use to send mails via their mail server.

	Email	
•		
SMTP Server Setu	ID	
SMTP Server		
Port		
Username		
Password		
L	SSL	
L		
- Rystom Notific	otion	
System Notific	auon	
Email Addres	S	
Send a Test Ma	il Send	
	Gend	
	Apply Refresh	
		1



When using Gmail from Google, make sure to allow less secure apps to access your account.

Field	Description	
SMTP Server	Enter the IP address or domain name of your SMTP mail server (e.g. smtp.gmail.com).	
Port	By default, the SMTP server uses port <b>25</b> . When SSL is enabled, the default port is <b>465</b> . Change the port number accordingly if your mail server is using a different port.	
Username	Enter the username of your email account.	
Password	Enter the password to your email account.	
SSL	Select the checkbox to enable a secure SSL connection. Disable this option if your mail server does not support it or if you have problems sending mails.	

Field	Description	
System Notification	Select or deselect the checkbox to enable or disable the system notifications. When enabled, the system will send you an email when certain system events occur. As an example:	
	Drive is full (used storage capacity is over 95%).	
	• Drive temperature is high (over 75°C).	
	• Other hard drive related issues.	
Email Address	Specify the email address where the system notifications will be sent to.	
Send	Click <b>Send</b> to send a test mail to the above email address in order to check if the SMTP server setup works.	
Apply	Click <b>Apply</b> to save the changes.	

From: http://wiki.myakitio.com/ - **MyAkitio Wiki** 

Permanent link: http://wiki.myakitio.com/preferences\_applications\_email



Last update: 2015/09/03 13:36